


Good Shepherd CHURCH H. O. SCALE


Before you start to build, read the instructions completely, and identify each part in your kit so that you know where it goes. Use watery STYRENE CEMENT and a small brush for assembly. Use ENAMEL PAINTS for finishing. Trim any rough spots with a small, sharp knife.

ASSEMBLY INSTRUCTIONS

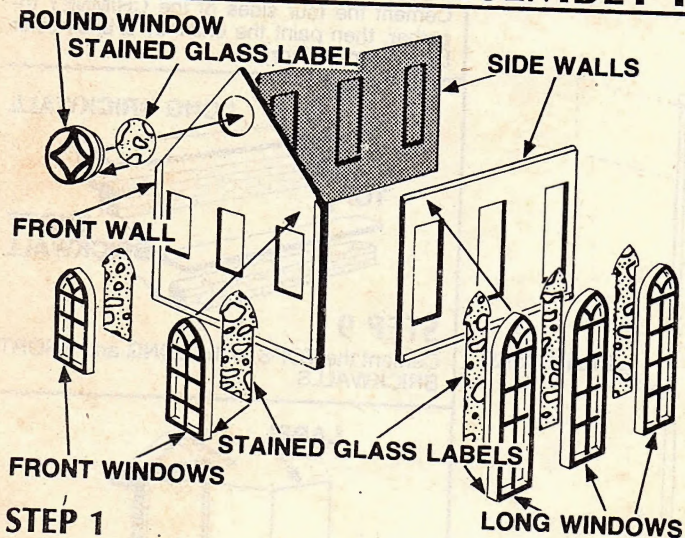


STEP 1

Insert the printed STAINED GLASS LABELS into the backs of the six LONG WINDOWS, the two FRONT WINDOWS and the ROUND WINDOW. Now carefully cement the windows into the walls.

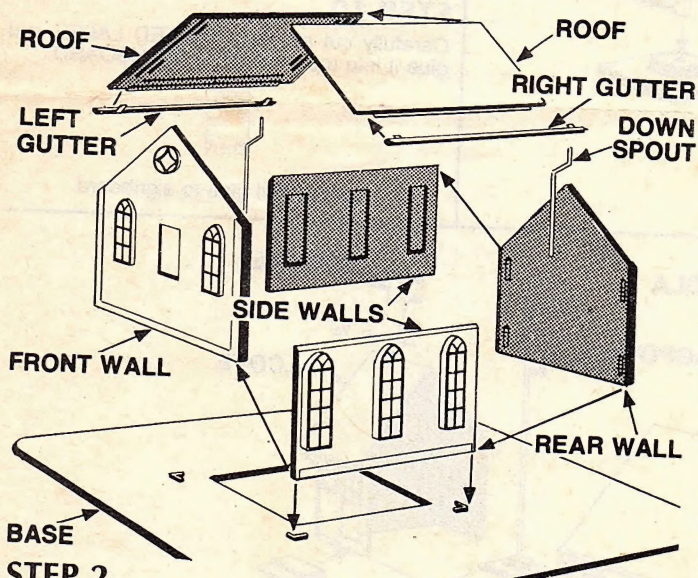


STEP 2

Cement the FRONT WALL, REAR WALL and SIDE WALLS to the BASE and to each other. Match up the numbers. Cement the right and left GUTTERS to the lower ledges of the two ROOF PANELS. Cement the roof panels to the sidewalls as shown. Now insert the upper ends of the DOWNSPOUTS into the holes in the gutters and cement the downspouts to the sidewalls.

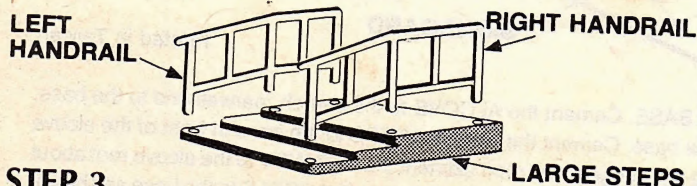


STEP 3

Paint the LARGE STEPS light grey. When dry, cement the two HANDRAILS into place with the flat sides facing inward.

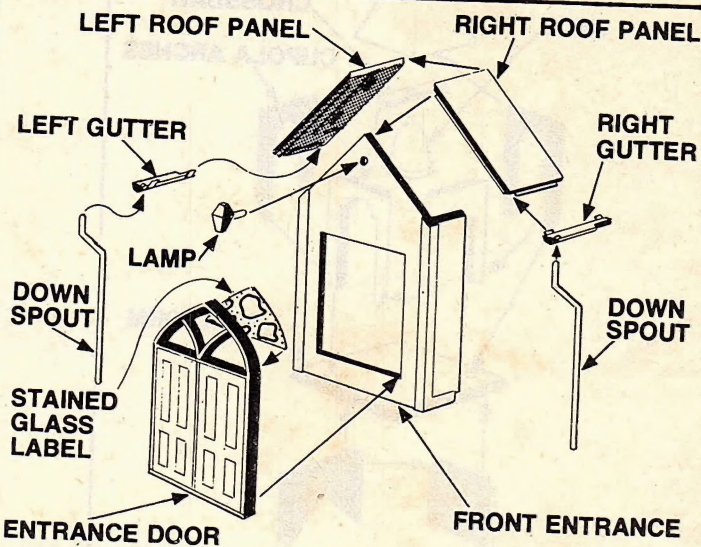

STEP 4


Paint the ENTRANCE ROOF PANELS grey to match the church roof, the LAMP and the DOWNSPOUTS black. Let dry. Now cement the right and left GUTTERS to the right and left roof panels, and the roof panels to the FRONT ENTRANCE. Insert the upper ends of the downspouts into the holes in the gutters and cement the downspouts to the sides of the front entrance. Insert the printed STAINED GLASS LABEL into the back of the ENTRANCE DOOR and cement the door and the LAMP to the front entrance.

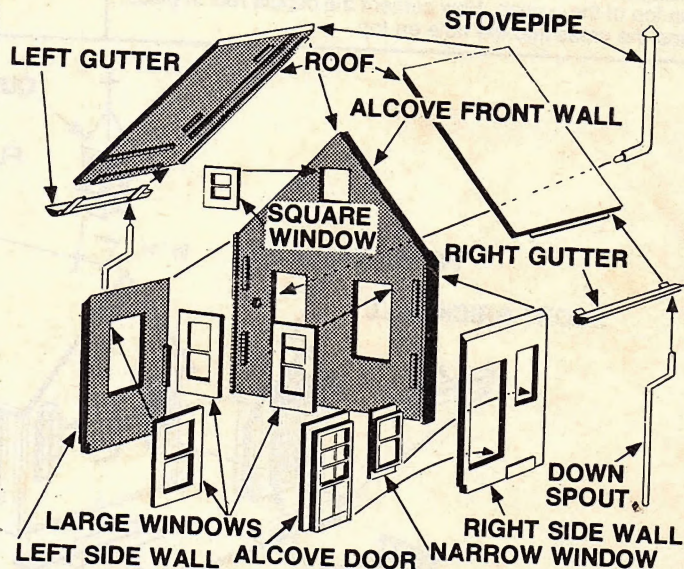

STEP 5

Paint the DOWNSPOUTS and the STOVEPIPE black and let them dry. Cement the three LARGE WINDOWS, the one SQUARE and one NARROW WINDOW and the ALCOVE DOOR into the ALCOVE WALLS as shown. Cement the right and left GUTTERS to the right and left ROOF PANELS. Now cement the roof panels to the alcove FRONT WALL, then cement the alcove SIDE WALLS to the gutters and cement the roof panels to the walls. Insert the upper ends of the DOWNSPOUTS into the holes in the gutters and cement the downspouts to the sidewalls. Cement the stovepipe into the hole in the front wall, and to the roof edge. Make sure the stovepipe goes up straight.

(Continued on other side)


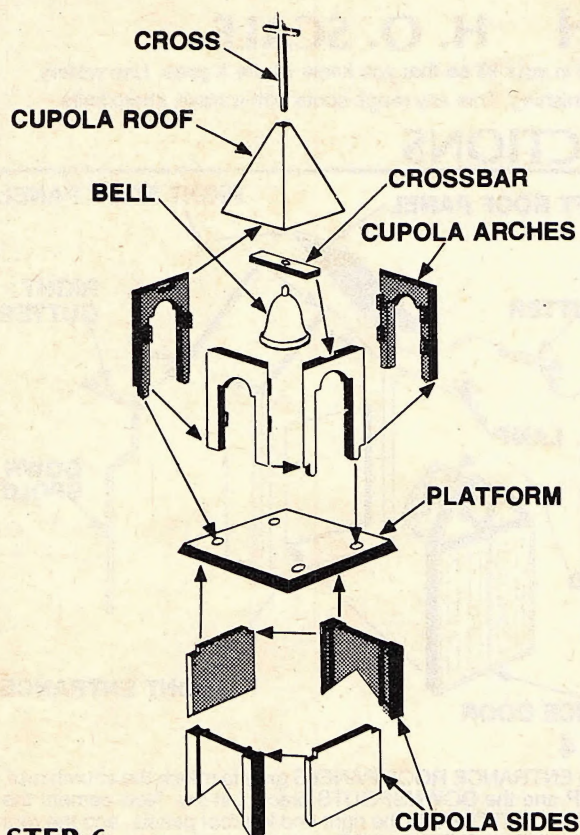


STEP 6

Paint the CUPOLA ROOF grey to match the church roof, and the CROSS gold. Cement the four CUPOLA SIDES together, then cement the PLATFORM on top. Cement the four CUPOLA ARCHES to each other, then cement the pins on the bottom into the holes in the platform. Cement the BELL to the CROSSBAR and the crossbar into the notches on top of the arches. Now cement the cupola roof in place, and the cross into the hole on top.


STEP 7

Slip the FLAGPOLE through the sleeve on the PRINTED FLAG, and slide the flag up to the top of the pole. Then cement the flagpole to the STAND.

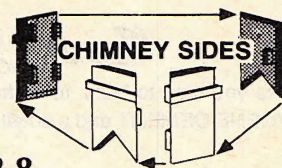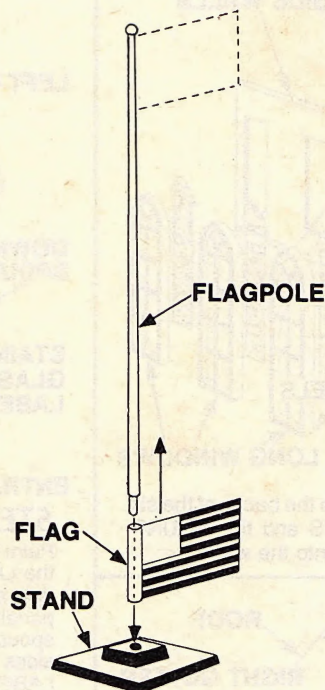


STEP 8

Cement the four sides of the CHIMNEY together, then paint the chimney a brick color brown and let it dry.

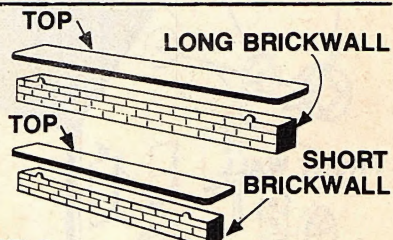

STEP 9

Cement the TOPS to the LONG and SHORT BRICKWALLS.

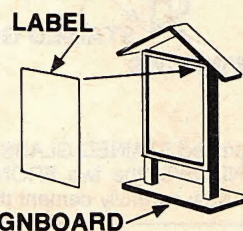


STEP 10

Carefully cut out the PRINTED LABEL and glue it into the front of the SIGNBOARD.



Cut out and glue to signboard

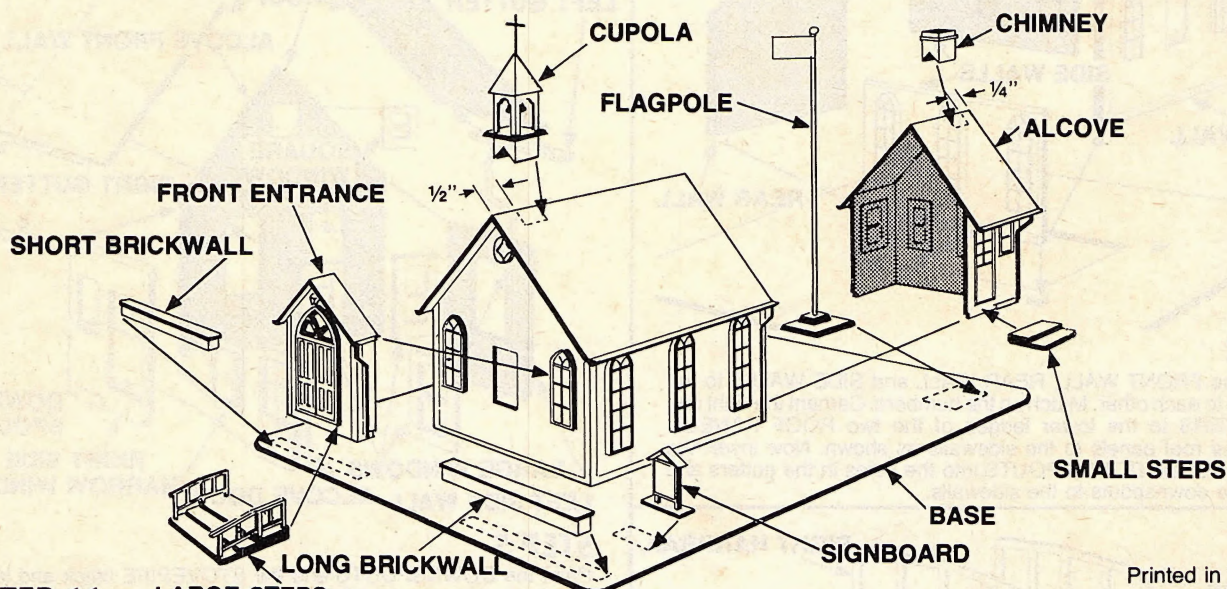

STEP 11 LARGE STEPS

Cement the FRONT ENTRANCE to the church front wall and to the BASE. Cement the ALCOVE to the church rearwall and to the base. Slide the LARGE STEPS under the entrance door and cement to the base. Cement the SMALL STEPS to the base in front of the alcove door. Cement the CUPOLA to the church roof about $\frac{1}{2}$ " back from the front edge of the roof. Cement the CHIMNEY to the alcove roof about $\frac{1}{4}$ " back from the edge. Finally cement the LONG and SHORT BRICKWALLS, the SIGNBOARD and the FLAGPOLE to the base as shown.

Printed in Taiwan